

**POWERRISE PLATINUM
TECHNOLOGY**

REMOTE CONTROL GUIDE

LUXAFLEX® Window Fashions with
PowerRise Platinum Technology




LUXAFLEX® WINDOW FASHIONS



Control Like Never Before

This guide shows you how to set up and operate LUXAFLEX® Window Fashions products using the PowerRise Platinum Technology remote control. In this guide, you'll learn the two methods to operate your window coverings. All window control features can be used with either method. Choose the method that works best for you.

Two Methods of Operation

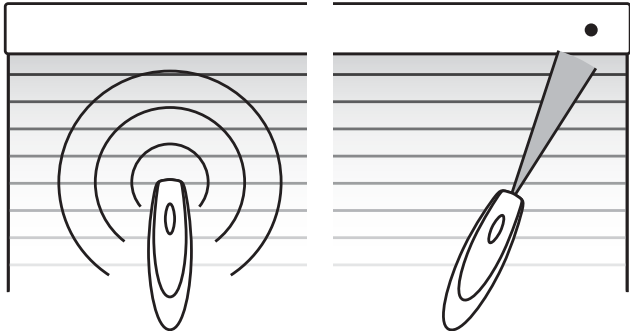

Radio Frequency

- No aiming necessary (like a garage-door opener)
- Control window coverings individually or in groups
- Two-button operation


Infrared Control

- Line-of-sight operation (like a flashlight)
- Control window coverings individually
- Default mode of remote
- One-button operation

Contents

Getting Started	1
Sensor Eye Locations	2
Basic Operation.....	3
Radio Frequency.....	4
Getting started with Radio Frequency.....	4
Group Assignment.....	4
Group Additional or Removal.....	5
Radio Frequency Operation	6
Setting up a duplicate remote.....	7
Additional Features	8
DUETTE® Shades	8
SILHOUETTE® & PIROUETTE®* Shadings.....	9
LUMINETTE® Privacy Sheers.....	11
Troubleshooting.....	3
Group Assignment Worksheet.....	19

 *LUXAFLEX® PIROUETTE® Shadings are sold exclusively through *LUXAFLEX® Window Fashions Gallery Dealers and David Jones.




Getting Started

Install the batteries in the remote control.



PowerRise Platinum Technology Remote Control

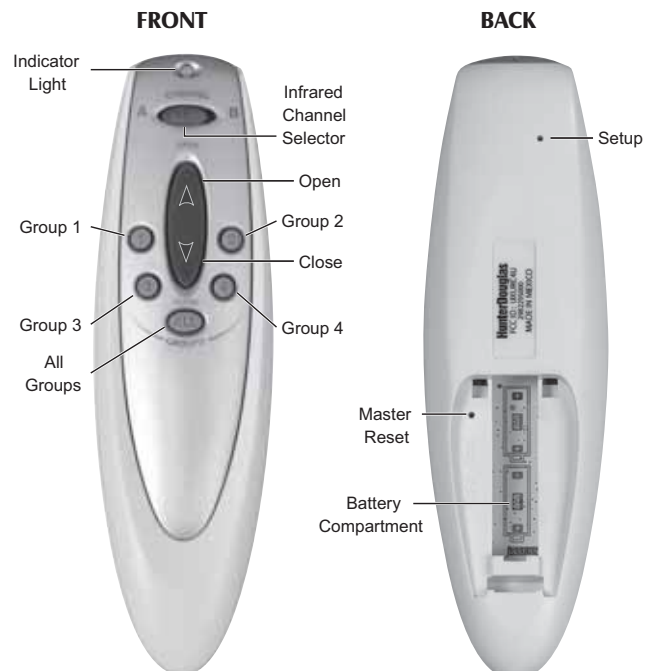


Sensor Eye Locations




Sensor eyes can be found in the following locations:

In the headrail LUXAFLEX® DUETTE® Shades

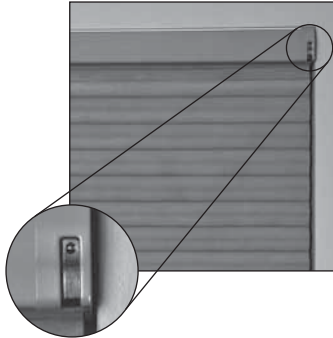

On a satellite eye LUXAFLEX® LUMINETTE® Privacy Sheers

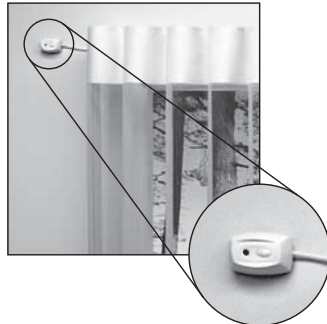

Below the headrail LUXAFLEX® SILHOUETTE® and PIROUETTE® Shadings



NOTE: the manual control button, used for operating a window covering without a remote, is usually adjacent to the sensor eye.

Basic Operation

In its default mode, the remote sends an infrared signal:



1. Aim the Remote at the Sensor Eye.

NOTE: For more information about the locations of sensor eyes, see “Sensor Eye Locations” on page 2.

2. Press and release the OPEN ▲ or CLOSE ▼ button to operate the window covering.

NOTE: Press and release the opposite ▼ or ▲ button to stop a moving window covering.

Try Radio Frequency

In addition to the default method of operation, the remote can be set up to use Radio Frequency. When you want the convenience of Radio Frequency and the ability to control multiple window coverings at the same time, see “Getting Started with Radio Frequency” on page 4.



Additional Features

For more information about the features of your specific window covering, see the appropriate section on page 8.

Radio Frequency

Getting Started with Radio Frequency

Radio Frequency gives you the ability to control individual and multiple window coverings at the same time, even if they are in another room.

Group Assignment

To use Radio Frequency, each window covering must first be assigned to a group. (A window covering can be a member of more than one group.)

NOTE: If your remote has already been set up, skip to the “Radio Frequency Operation” section on page 6.

There are four unique assignable groups to use. A group can be a single window covering or multiple window coverings.

Before beginning, think about how you will group your window coverings. For example, you might create a group for all window coverings in a single room or a group just for all window coverings on one wall. You can use the “Group Assignment Worksheet” on page 19, to help you plan.

NOTE: We recommend that only similar window coverings be included in a group (e.g., DUETTE® Shades assigned to Group 1 and SILHOUETTE® Shadings assigned to Group 3) because of differences in product features and operation.

Radio Frequency

Group Additional or Removal

Before you begin, operate the window covering using infrared control to make sure that you are communicating with only one window covering and that the window covering is working properly.



TIP: Move the remote as close as possible (50-75mm) to the sensor eye when assigning groups.

1. With a paperclip, press and release the recessed SETUP button on the back of the remote. The Indicator Light on the front of the remote flashes green for approximately 30 seconds.



2. While the Indicator Light is flashing green, press the group button for the group to which you plan to assign the window covering.
3. Point the remote at the sensor eye of the window covering and press the OPEN ▲ button to add the window covering to the group or the CLOSE ▼ button to remove the window covering from the group. The window covering moves slightly (or “jogs”) to indicate that it has been added to or removed from the group.



4. Exit setup mode by pressing and releasing the SETUP button a second time. The remote saves any changes made and the Indicator Light stops flashing.

Radio Frequency

Radio Frequency Operation


Operating your window coverings using Radio Frequency is much like using infrared control, except that you can control multiple window coverings at the same time, even if they are in another room, and you do not have to aim the remote at the sensor eye.

1. Press the group button assigned to the window coverings.
2. Press the OPEN ▲ button to open the window covering or the CLOSE ▼ button to close the window covering.

NOTE: To stop a window covering while it is moving, press the assigned group button, then press the opposite ▼ or ▲ button.

NOTE: To operate all window coverings assigned to the remote, press the ALL button before pressing OPEN ▲ or ▼ CLOSE.

NOTE: Operational distances using Radio Frequency may vary depending on common household construction differences.

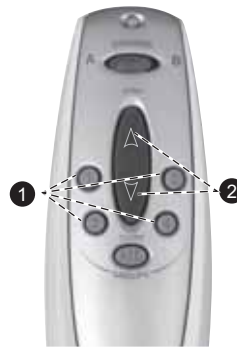

ADDITIONAL FEATURES

For more information about the features of your specific window covering, see the appropriate section on page 8.

Radio Frequency

Setting Up a Duplicate Remote


If you want a backup for your primary remote or wireless wall switch, you can quickly duplicate the current transmitter. When this procedure is complete, any change made with any of the transmitters also affects the operation of the other remotes and wireless wall switches. Follow this procedure:

1. Mark the original transmitter.
2. Remove the battery cover from the duplicate remote.

3. With a paperclip, press and hold the MASTER RESET button on the backup remote for approximately 10 seconds. The Indicator Light on the front of the remote starts flashing red.



4. Place the marked original remote or wireless wall switch within 460mm of the backup remote and press the OPEN ▲ button on the marked original. The Indicator Light on the backup remote stops flashing.

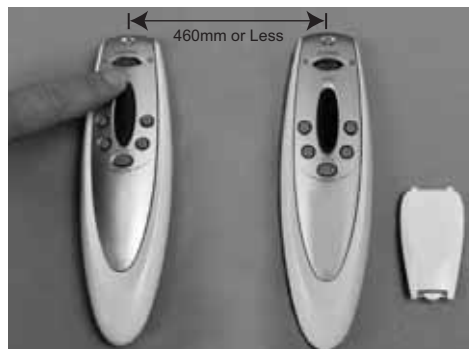

5. Replace the battery cover on the backup remote. It is now ready for use.

Additional Features

LUXAFLEX® DUETTE® Shades

This section includes additional features information for LUXAFLEX® DUETTE® Shades window covering products.


RADIO FREQUENCY OPERATION

See the “Basic Radio Frequency Operation” section on page 6 for information about using the remote to operate a window covering.

INTERMEDIATE STOP

An intermediate stop allows the shade to be preset so that it can be stopped at the same height each time it is raised or lowered.

1. Open and close the shade fully, then adjust the shade to the desired height.
2. Press and hold the ALL button for six seconds. *The Indicator Light on the front of the remote starts flashing green.

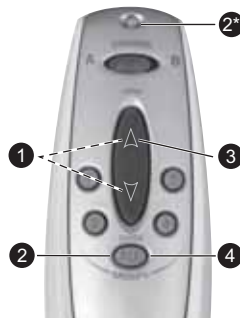

3. Point the remote at the sensor eye and press the OPEN ▲ button to set the intermediate stop. The shade moves slightly (or “jogs”) to indicate that the intermediate stop has been added.
4. Press ALL to save the stop; the Indicator Light stops flashing.

NOTE: One intermediate stop can be set for each shade. If you set a new intermediate stop, it replaces the previous stop.

NOTE: Reset the shade to clear an intermediate stop. See “Resetting a Window Covering to its Factory Defaults” on page 17.

INFRARED CONTROL

All features can be enjoyed using either infrared or Radio Frequency. See “Basic Operation” on page 3 for more information about infrared control.



Additional Features

LUXAFLEX® SILHOUETTE® and PIROUETTE® Shadings

This section includes additional features information for LUXAFLEX® SILHOUETTE® and PIROUETTE® Shadings window covering products.

RADIO FREQUENCY OPERATION

See the “Basic Radio Frequency Operation” section on page 6 for information about using the remote to operate a window covering.

OPENING VANES

1. When the shading is in the fully lowered position (with the vanes closed), press and release the assigned group button.
2. Press and release the CLOSE ▼ button. The shading remains lowered while the vanes open to allow more light.

CLOSING VANES

1. When the shading is in the fully lowered position with the vanes open, press and release the assigned group button.
2. Press and release the OPEN ▲ button. The shading remains lowered while the vanes close for increased privacy.

ADJUSTING VANES

1. Press the assigned group button.
2. Press the OPEN ▲ or CLOSE ▼ button to start adjusting the vanes.
3. Press the opposite ▼ or ▲ button to stop the vanes in the desired position.

NOTE: Vane alignment between shadings may not be exact.


Additional Features

LUXAFLEX® SILHOUETTE® and PIROUETTE® Shadings

INTERMEDIATE STOP

An intermediate stop allows the window shading to be preset so that it can be stopped at the same height each time it is raised or lowered.

1. Open and close the shading fully, then adjust the shading to the desired height.
2. Press and hold the ALL button for six seconds. *The Indicator Light on the front of the remote starts flashing green.
3. Point the remote at the sensor eye and press the OPEN ▲ button to set the intermediate stop. The shading moves slightly (or “jogs”) to indicate that the intermediate stop has been added.

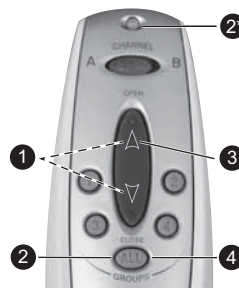

4. Press ALL to save the stop; the Indicator Light stops flashing.


NOTE: One intermediate stop can be set for each shading. If you set a new intermediate stop, it replaces the previous stop.

NOTE: Reset the shading to clear an intermediate stop. See “Resetting a Window Covering to its Factory Defaults” on page 17.

EXPRESS MODE

When the shading is in any position, you can raise or lower it fully (bypassing the intermediate stop) as follows:

1. Press the appropriate group button.
2. Press and hold the OPEN ▲ or CLOSE ▼ button for five seconds. The shading opens fully or closes fully with the vanes open.

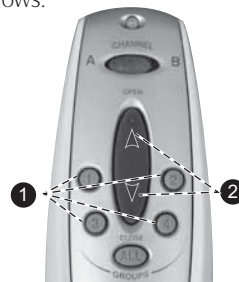

INFRARED CONTROL

All features can be enjoyed using either infrared or Radio Frequency. See “Basic Operation” on page 3 for more information about infrared control.



Additional Features

LUXAFLEX® LUMINETTE® Privacy Sheers

This section includes additional features information for LUXAFLEX® LUMINETTE® Privacy Sheers window covering products.

TRAVERSING LUMINETTE® PRIVACY SHEERS

TRAVERSING CLOSED

1. Press and release the assigned group button
2. Press and release the CLOSE ▼ button. The product traverses to its fully closed position.



TRAVERSING OPEN

1. Press and release the assigned group button.
2. Press and release the OPEN ▲ button. The product tilts its vanes to a fully open position (if applicable) and traverses to its fully open position.



STOPPING THE TRAVERSE

1. Press and release the assigned group button
2. Press the opposite ▼ or ▲ button.

NOTE: After traversing LUMINETTE® Privacy Sheers, you must wait at least four seconds before tilting the vanes.

Additional Features

LUXAFLEX® LUMINETTE® Privacy Sheers

Tilting LUMINETTE® Privacy Sheer Vanes

LUMINETTE® Privacy Sheers have a sheer face fabric to let light in and integrated soft fabric vanes that tilt to keep light out.

1. Press and release the assigned group button, then press and release the CLOSE ▼ button to traverse the sheers fully closed.

NOTE: The vanes will not tilt unless the LUMINETTE® Privacy Sheers are fully traversed closed.

2. Press and release the assigned group button, then press and hold the OPEN ▲ or CLOSE ▼ button. After one second, the vanes begin to tilt.
3. When you are satisfied with the position, release the button.

NOTE: After tilting the vanes, you must wait at least four seconds before you can traverse the sheers open.

INFRARED CONTROL

All features can be enjoyed using either infrared or Radio Frequency. See "Basic Operation" on page 3 for more information about infrared control.



Trouble Shooting

PROBLEM: WINDOW COVERING DOES NOT OPERATE WITH THE REMOTE

SOLUTION:

1. Make sure the Indicator Light on the remote comes on when you try to operate the window covering.
 - If the Indicator Light does not come on, replace the batteries in your remote.
2. Operate the window covering using its manual control button. If the window covering doesn't operate, make sure it has power:

NOTE: The manual control button is usually next to the sensor eye of the window covering.

- If the window covering is battery powered, replace the batteries in the battery wand or satellite battery pack.
 - If the window covering is powered from a DC power supply, make sure it is plugged in and the wall outlet has power.
3. If the batteries in the remote are good and the window covering works when you use the manual control button, do one of the following:
 - If the Indicator Light is red when you press the OPEN ▲ or CLOSE ▼ button, go to "No infrared operation," on page 14.
 - If the Indicator Light is a steady green when you press the OPEN ▲ or CLOSE ▼ button, go to "No Radio Frequency operation," on page 14.
 - If the Indicator Light is flashing green, you are in setup mode. Wait 30 seconds or use a paperclip to press and release the SETUP button to exit setup mode.

Trouble Shooting

PROBLEM: NO INFRARED OPERATION

SOLUTION:

- Make sure that you are pointing the remote at the sensor eye.
- Make sure that you are close enough to the sensor eye.
- Make sure that the sensor eye is not covered or obstructed.
- Make sure that there is no direct sunlight or bright, focused light shining on the sensor eye.
- Make sure that the correct channel is selected on the remote. Most window coverings are set to Channel A, but if Channel A does not work, move the Infrared Channel Selector switch to Channel B.

PROBLEM: NO RADIO FREQUENCY OPERATION

SOLUTION:

- Make sure you have added the window covering to a group. For more information, see "Group Assignment" on page 4.
- Make sure you have pressed the group button for the group to which the window covering has been assigned. If you need to add a window covering to a group, see "Group Addition or Removal" on page 5.
- Make sure you press the OPEN ▲ or CLOSE ▼ button within five seconds after choosing and pressing a group button. After that time, the green Indicator Light turns off and the remote reverts to infrared control.

NOTE: Due to differences in household construction, Radio Frequency operation may vary within a home. Try operating the window covering from different locations in the home.

Trouble Shooting

PROBLEM: WINDOW COVERING OPERATES WHEN YOU DO NOT WANT IT TO OPERATE

SOLUTION:

- If the Indicator Light on your remote is red when you press the OPEN ▲ or CLOSE ▼ button, go to “Unexpected infrared operation” below.
- If the Indicator Light on your remote is a steady green when you press the OPEN ▲ or CLOSE ▼ button, go to “Unexpected Radio Frequency operation” on page 16.
- If you are not pressing the OPEN ▲ or CLOSE ▼ button when the window covering is operating, make sure no one else is using a backup remote or wireless wall switch to control the window covering.

PROBLEM: UNEXPECTED INFRARED OPERATION

SOLUTION:

The infrared signal of the remote spreads and reflects off of surfaces. If other sensor eyes are within the area affected by the infrared signal, you might control those window coverings unexpectedly.

To solve this problem:

- Move closer to the sensor eye on the window covering you intend to operate.
- Aim the remote slightly away from the window coverings you do not intend to operate.

NOTE: If you still have problems with unexpected operation, you can switch to Radio Frequency operation. See “Getting Started with Radio Frequency” on page 4.

Trouble Shooting

PROBLEM: UNEXPECTED RADIO FREQUENCY OPERATION

SOLUTION:

- Make sure you have chosen the correct group to operate. If you need to remove a window covering from a group, see “Group Addition or Removal” on page 5.
- If the Indicator Light on the remote is not a steady green when you press the OPEN ▲ or CLOSE ▼ button, the remote is using infrared. To make sure you are using Radio Frequency, press a group button not more than five seconds before you press the OPEN ▲ or CLOSE ▼ button.

PROBLEM: WINDOW COVERING DOES NOT OPEN OR CLOSE FULLY OR HAS AN INTERMEDIATE STOP THAT IS NO LONGER WANTED.

SOLUTION:

- Make sure the window covering and track are not obstructed.
- Reset the window covering as described in “Resetting a Window Covering to its Factory Defaults,” on page 17.

Trouble Shooting

RESETTING A WINDOW COVERING TO ITS FACTORY DEFAULTS

For DUETTE® Shades, SILHOUETTE® Shadings and PIROUETTE® Shadings, to clear all stops and reset the window covering to factory defaults:

1. Raise the window covering fully.
2. Aim the remote at the receiver eye on the window covering.
3. Press and hold the OPEN button for 10 seconds. The window covering moves slightly (or “jogs”) to indicate that all stops are now cleared.
4. Lower the window covering completely (this sets the lower motor limit).
5. Raise the window covering completely (this sets the upper motor limit).

The intermediate stop position is now cleared and the upper and lower motor limits are now reset.

For LUMNINETTE® Privacy Sheers, if you have a power outage or if your window covering is not opening or closing fully, reset the system:

1. Disconnect power from the window covering by unplugging its DC power supply from the wall.
2. Wait 10 seconds.
3. Plug the DC power supply back into the outlet.
4. Traverse the window covering fully closed (fabric or panels cover the window) and then fully open (fabric or panels stacked back). This resets the open and close limits to the factory settings.

Trouble Shooting

CHANGING THE INFRARED CHANNEL OF A WINDOW COVERING

PowerRise Platinum Technology window coverings can operate on either of two infrared channels. While many installations work well when all window coverings are on the same infrared channel, it can sometimes be convenient to change the infrared channel for some window coverings to reduce inadvertent operation.

If you need to change the infrared operating channel of a window covering:

1. With the window covering raised completely, set the infrared channel selector switch on the remote to the desired channel (A or B).
2. Point the remote at the sensor eye.
3. Press and hold the manual control button on the window covering.
4. Press and hold the OPEN ▲ button while holding the manual control button. The window covering moves slightly ("jogs") to indicate the operating channel has been accepted.

Group Assignment Worksheet

Before assigning window coverings to groups, it is recommended that you plan your group assignments. For example, you might create a group for all window coverings in a single room or a group just for all window coverings on one wall.

NOTE: A window covering can be a member of more than one group.

NOTE: LUXAFLEX® Window Fashions recommends that only similar window coverings be included in a group (e.g. DUETTE® Shades assigned to Group 1 and SILHOUETTE® Shadings assigned to Group 3) because of differences in product features and operation.

NOTE: All window coverings in a group should have no intermediate stop or have similar intermediate stop settings.

GROUP #	LOCATION OF WINDOW COVERING

The Power of Platinum

LUXAFLEX® Window Fashions with PowerRise Platinum Technology

LUXAFLEX® DUETTE® Shades
LUXAFLEX® SILHOUETTE® Shadings
LUXAFLEX® LUMINETTE® Privacy Sheers
LUXAFLEX® PIROUETTE® Shadings

Technical Information:

- Batteries: 2 AAA
- Operating Frequencies
 - IR: 40kHz
 - RF: 2.4 GHz



© Copyright 2011 Hunter Douglas Limited [ABN 98 009 675 709]. © Registered Trade Marks of Hunter Douglas Limited. 08/2011

LUXAFLEX® WINDOW FASHIONS

